


PROTECTION FOR YOUR INVESTMENT VEHICLE SERVICE AGREEMENT OPTIONS

DO YOU KNOW the average cost to repair/replace these standard vehicle parts?

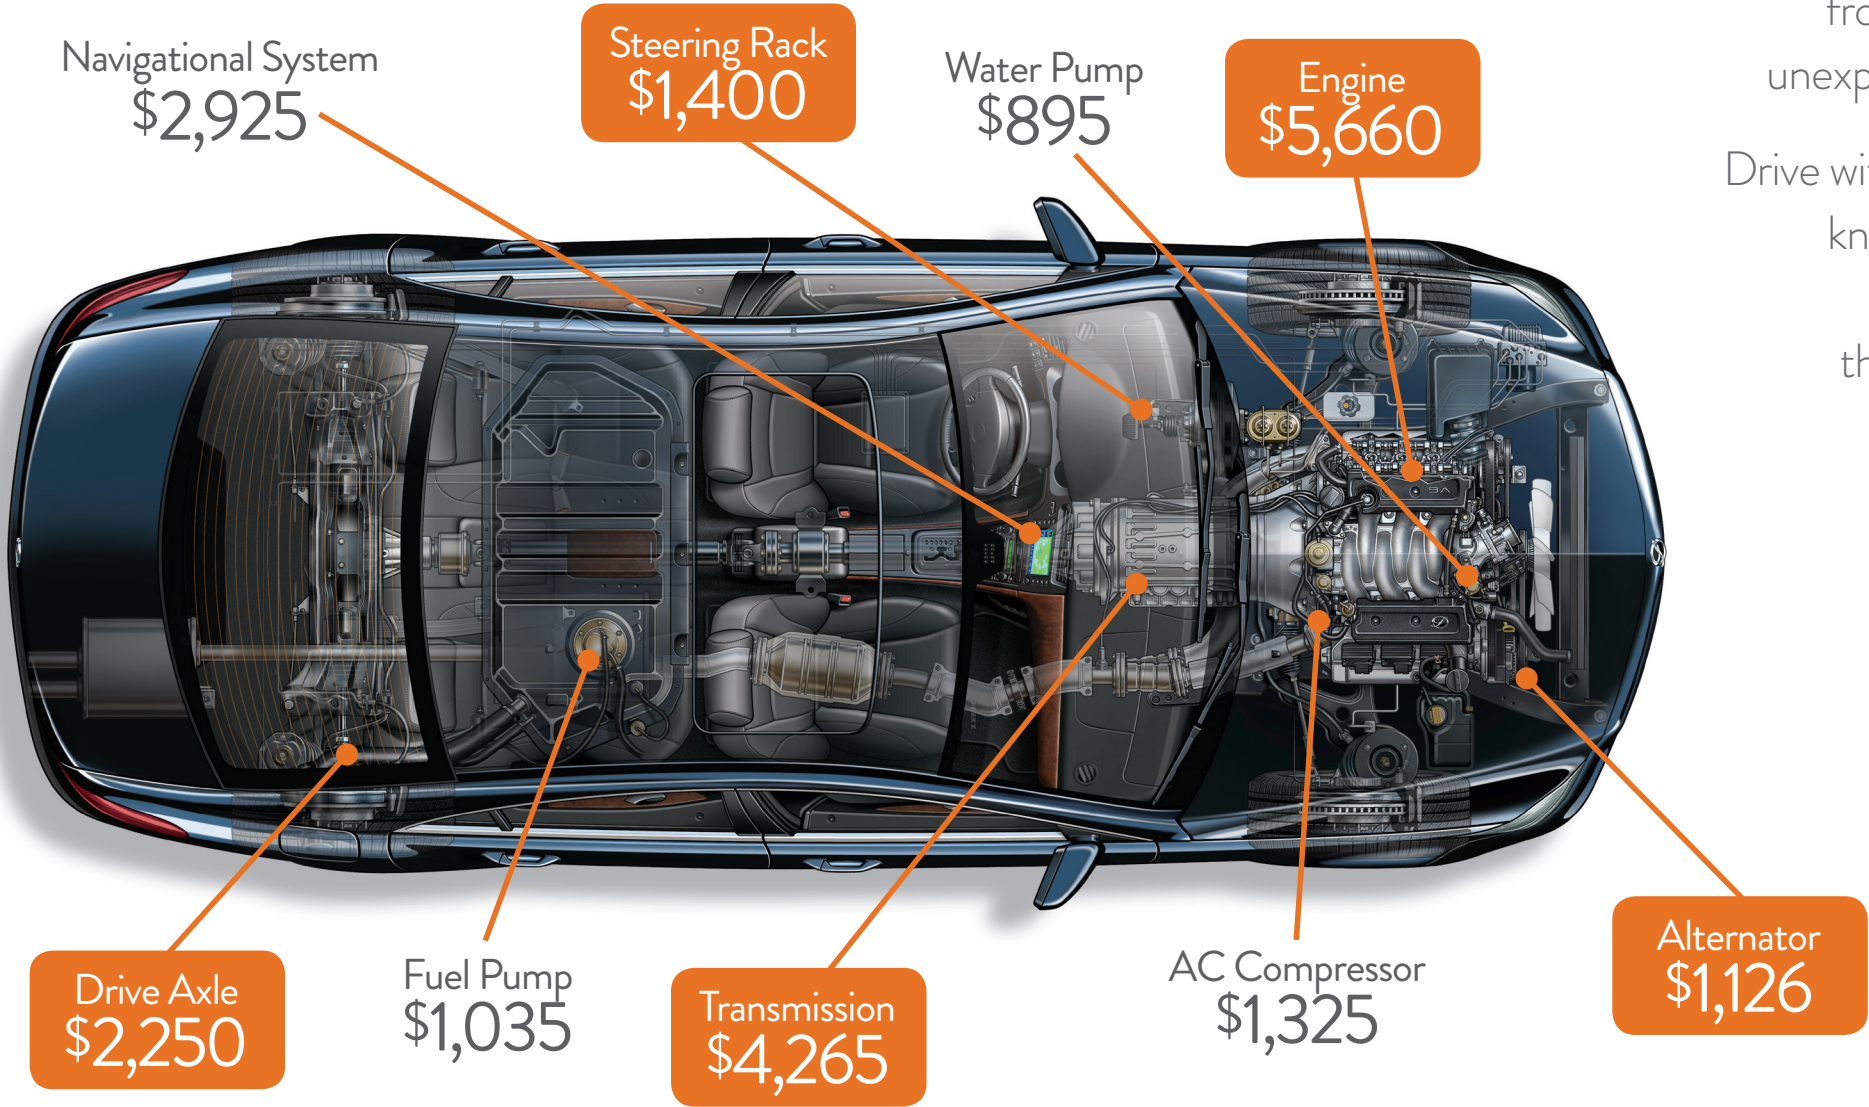

Your vehicle is the investment that moves the most.

Let us protect you from the cost of unexpected repairs.

Drive with confidence knowing you are protected for the road ahead.

GET THE MOST OUT OF YOUR COVERAGE

With FIVE levels of coverage, our protection offers affordable options to ensure your vehicle is protected against costly mechanical and electrical repairs.

ADDITIONAL BENEFITS, 24-HOUR ROADSIDE ASSISTANCE & MORE!

- ✓ Manufacturer Deductible
 - ✓ Mechanical First Aid
 - ✓ Tire Service
 - ✓ Battery Service
 - ✓ Delivery Service
 - ✓ Towing Service
- ✓ Locksmith Services
 - ✓ Substitute Transportation
 - ✓ Trip Interruption
 - ✓ Key Fob Coverage
 - ✓ Dent Repair
 - ✓ Windshield Repair

UPGRADE TO OUR **PLATINUM COVERAGE** FOR TOP-LEVEL PROTECTION!

	PLATINUM	GOLD	SILVER	POWERTRAIN	POWERWRAP
Additional Coverage for NEARLY EVERY Mechanical and Electrical Component!	•				•
Electrical + Audio Components	•	•			•
Fuel Injectors	•	•			•
Brakes + ABS Components	•	•			•
Basic Electrical Components	•	•	•		•
Air Conditioning & Heating	•	•	•		•
Basic Brake Components	•	•	•		•
Steering	•	•	•		•
Front & Rear Suspension	•	•	•		•
Fuel System	•	•	•		•
Cooling System	•	•	•		•
Engine	•	•	•	•	
Turbo/Supercharger	•	•	•	•	
Transmission & Transfer Unit	•	•	•	•	
Drive Axle Assembly	•	•	•	•	
Seals & Gaskets	•	•	•	•	

(1) Restrictions & limitations may apply. Please see contract for complete details. Please refer to your Vehicle Service Agreement for a more comprehensive list of what's covered with your plan options.

This material is for marketing purposes only.

Get our **TOP-LEVEL** peace-of-mind protection for your vehicle and your wallet with a **PLATINUM SERVICE AGREEMENT!**

Parts pricing listed in illustration is based on average of actual repairs at a retail rate for Parts & Labor. Actual repair costs may vary by repair facility, vehicle and location.

UPGRADE TO OUR TOP-LEVEL PLATINUM Protection Plan

Platinum is our most comprehensive option and is the highest level of protection we offer to the vehicle buyer.

IF IT'S NOT LISTED IN THE EXCLUSION SECTION ON THE CONTRACT IT'S COVERED!*

POWERWRAP COVERAGE

PowerWrap coverage is designed to “wrap” around the manufacturer’s warranty but specifically excludes Powertrain coverage. The Powertrain includes all parts and components of the Engine, Turbo Charger, Super Charger, Transmission, Transfer Unit, and Drive Axle.

OPTIONAL BENEFITS

COVERAGE IS AVAILABLE FOR AN ADDITIONAL FEE FOR THE FOLLOWING:

HYBRID ELECTRIC VEHICLE (HEV):

Electric motor, power controller, inverter assembly, generator(s), electronic air conditioning compressor, electronic power steering pump. Batteries are excluded. (PLATINUM and GOLD coverage only).

LIFT KITS

PERSONAL SNOW PLOWS

OVER/UNDER SIZED TIRES

COMMERCIAL USE:

As defined in your agreement.

COMPARE COVERED COMPONENTS

COMPARE COVERED COMPONENTS** AND SEE WHICH PLAN BEST SUITS YOUR NEEDS:

• PLATINUM

• GOLD

• SILVER

• POWERTRAIN

• POWERWRAP

ENGINE

- • • • All Internally Lubricated Parts
- • • • Cam Bearings
- • • • Camshaft
- • • • Connecting Rods
- • • • Crankshaft
- • • • Cylinder Heads
- • • • Engine Block
- • • • Engine Mounts
- • • • Exhaust Manifold
- • • • Flex Plate
- • • • Flywheel & Ring Gear
- • • • Harmonic Balancer
- • • • Head Gasket
- • • • Intake Manifold
- • • • Lifters
- • • • Oil Dipstick & Tube
- • • • Oil Pump
- • • • Oil Pickup Screen
- • • • Oil Pump Drive Sprocket
- • • • Pistons
- • • • Pushrods
- • • • Rocker Arms
- • • • Rod & Main Bearings
- • • • Timing Belt
- • • • Timing Chain
- • • • Timing Chain/Tensioner
- • • • Oil Pan (If damaged by an Internally Lubricated Part).
- • • • Valve Covers (If damaged by an Internally Lubricated Part).
- • • • Wrist Pins

SEALS & GASKETS

- • • • Covered on all listed components with vehicles that have less than 125,000 miles on odometer at time of sale.

TURBO/SUPERCARGER

- • • • All Internally Lubricated Parts.
- • • • Housing (If damaged by an Internally Lubricated Part).
- • • • Turbo Boost Valve
- • • • Turbo Waste Gate Actuator

AUTOMATIC TRANSMISSION

- • • • All Internally Lubricated Parts
- • • • All Gears
- • • • Bands
- • • • Bearings & Bushings
- • • • Cooler
- • • • Clutch Plates
- • • • Friction & Steel Drums
- • • • Front Pump
- • • • Gears
- • • • Governor
- • • • Input Shaft

- • • • Internal Valves
- • • • Oil Pump
- • • • Output Shaft
- • • • Overdrive Carrier
- • • • Pistons
- • • • Planetary Assemblies
- • • • Pressure Regulator Valve
- • • • Reaction Carrier
- • • • Rings
- • • • Servo Unit
- • • • Shafts
- • • • Synchronizers
- • • • Torque Converter
- • • • Transmission Mounts
- • • • Vacuum Modulator
- • • • Valve Body
- • • • Transmission Case (If damaged by an Internally Lubricated Part).
- • • • Transfer Unit
- • • • All Internally Lubricated Parts within the Transfer Case.
- • • • Transfer Case (If damaged by an Internally Lubricated Part).

DRIVE AXLE ASSEMBLY (Front & Rear)

- • • • All Internally Lubricated Parts within the Drive Axle Housing.
- • • • Axle Bearing
- • • • Carrier Bearing
- • • • Center Carrier Bearings
- • • • Constant Velocity Joint
- • • • Double Offset Joints
- • • • Drive Shaft/Yolks
- • • • Locking Hub Mechanisms
- • • • Pinion Bearing
- • • • Propeller Shafts
- • • • Ring & Pinion Gears
- • • • Spider Gears
- • • • Universal Joints
- • • • Drive Axle Housing (If damaged by an Internally Lubricated Part).

ELECTRICAL

- • • • All Electrical Manual Switches
- • • • Alternator
- • • • Analog Gauges
- • • • Body Control Module
- • • • Cam Sensor
- • • • Coil Pack
- • • • Convertible Top Motor
- • • • Coolant Temperature Sensor
- • • • Crank Sensor
- • • • Cruise Control Module
- • • • Cruise Control Servo
- • • • Cruise Engagement Switch
- • • • Generator
- • • • Ignition Coil
- • • • Ignition Module
- • • • Inverter Assembly
- • • • Electronic Air Conditioning Compressor
- • • • Electric Motor
- • • • Electronic Instrument Cluster
- • • • Electronic Ignition Mngt. Controls
- • • • Electronic Fuel Mngt. Controls
- • • • Electronic Power Steering Pump
- • • • Engine Control Module (ECM)
- • • • Powertrain Control Module (PCM)
- • • • Power Antenna Motor
- • • • Power Controller
- • • • Power Door Lock Actuators
- • • • Power Mirror Motor
- • • • Power Mirror Switch
- • • • Power Seat Motor
- • • • Power Seat Switch
- • • • Power Sunroof Motor
- • • • Power Window Motor
- • • • Power Window Regulator
- • • • Power Window Switch
- • • • Starter Drive
- • • • Starter Motor

- • • • Starter Solenoid
- • • • Vehicle Speed Sensor
- • • • Voltage Regulator
- • • • Washer Motor
- • • • Wiper Circuit Board
- • • • Wiper Motor(s) (Front & Rear)
- • • • Radio
- • • • Compact Disc Player if mfg installed (Repair Only)
- • • • Cassette Player if mfg installed (Repair Only)
- • • • ATC Sensor Assembly
- • • • AC Clutch Cycling Switch
- • • • AC Compressor RPM Sensor
- • • • AC Compressor Temperature Switch
- • • • AC Mixed Air Sensor
- • • • AC Thermostatic Switch
- • • • ABS Block Solenoid Valve
- • • • ABS Compressor
- • • • ABS Pedal Travel Switch
- • • • ABS Pressure Switch
- • • • Air Change Temperature Sensor
- • • • Air Suspension Compressor
- • • • Air Suspension Compressor Relay
- • • • Air Suspension Dryer Assembly
- • • • Auto Dimmer Control Assembly
- • • • Brake Light Switch
- • • • Central Locking Control Module
- • • • Cigarette Lighter Assembly
- • • • Clock
- • • • Cruise Control Amplifier
- • • • Cruise Control Drive Unit
- • • • Cruises Control Dump Unit
- • • • Cruise Control Speed Sensor
- • • • Dimmer Sensor Assembly
- • • • Distributor
- • • • Door Close Assist Motor
- • • • Door Close Assist Relay
- • • • Door Jam Switch
- • • • Door Lock Cylinder
- • • • EGR Valve Temperature Sensor
- • • • Electronic Actuated (4WD)
- • • • Electronic Combination Entry System
- • • • Electronic Driver Information Display
- • • • Electronic Level Control Compressor
- • • • Electronic Level Control Motor
- • • • Electronic Level Control Relay
- • • • Electronic Level Control Sensor
- • • • Electronic Off Headlamp Sensors
- • • • ESC Module
- • • • Fan Control Relay
- • • • Fan Thermo Switch
- • • • Foglamp Relay
- • • • Front Accelerometer
- • • • Front Position Sensor
- • • • Fuel Door Operating Pump
- • • • Fuel Pump Inertia Switch
- • • • Hall Effect Switch
- • • • Headlamp Motor
- • • • Headlamp Washer Pump
- • • • Headlamp OFF Sensor
- • • • Headlamp Switch
- • • • Headlamp Wiper Motor
- • • • Headrest Switch
- • • • Heated Seat Control Unit
- • • • Heated Windshield Relay
- • • • Heated Windshield Control Assembly
- • • • Heated Windshield Switch
- • • • Heated Core Temperature Sensor
- • • • Hood Latch/Cable
- • • • Horn
- • • • Horn Relay
- • • • Horn Switch
- • • • Igniter
- • • • Ignition Control Unit
- • • • Ignition Cylinder
- • • • Ignition Switch
- • • • Ignition Timing Sensor
- • • • Impulse Rotor
- • • • Instrument Cluster

- • • • Instrument Panel Temperature Sensor
- • • • Intermittent Wiper Governor
- • • • Keyless Entry System
- • • • Knock Sensor
- • • • Lamp Sensor Amplifier
- • • • Limiter Valve
- • • • Manifold Air Temperature Sensor
- • • • Mileage Computer
- • • • Neutral Safety Switch
- • • • Oil Pressure Sending Unit
- • • • On/Off Headlamp Sensor
- • • • OnStar®, Sync® & Similar Systems
- • • • Pick Up Coil
- • • • Power Door Lock Relay
- • • • Power Seat Control Processor
- • • • Power Seat Control Processor Sensor
- • • • Power Steering Computer
- • • • Power Sunroof Actuator
- • • • Power Sunroof Control Module
- • • • Power Sunroof Control Motor
- • • • Power Trunk Lock Relay
- • • • Power Seat Height
- • • • Adjusting Potentiometer
- • • • Power Seat Length
- • • • Adjusting Potentiometer
- • • • Progressive Power Steering Computer
- • • • Rear Accelerometer
- • • • Rear Defroster
- • • • Rear Defroster Relay
- • • • Rear Defrost Switch
- • • • Rear Position Sensor
- • • • Seat Back Adjusting Motor
- • • • Seat Heater Element
- • • • Speed-O Head
- • • • Speed Sensor
- • • • T.C.I. Switch Unit
- • • • Traction Control Hydraulic Pump Motor
- • • • Traction Control Pressure Switch
- • • • Traction Control Wheel Speed Sensor
- • • • Transfer Case Computer & Sensor
- • • • Trunk Close Motor
- • • • Trunk Close Relay
- • • • Trunk Release Switch
- • • • Turbo Boost Indicator
- • • • Turbo Boost Indicator Sending Unit
- • • • Turbo Waste Gate Actuator
- • • • Turbo Waste Gate Solenoid
- • • • Turn Signal Switch
- • • • Wiper Switch
- • • • Wiper Trans
- • • • Main Wiring Harness

BRAKES

- • • • ABS Accumulator
- • • • ABS Control Unit
- • • • ABS ECU
- • • • ABS Hydraulic Unit
- • • • ABS Motor
- • • • ABS Pump
- • • • ABS Sensors
- • • • Backing Plates
- • • • Brake Booster
- • • • Brake ECU
- • • • Brake Fluid Reservoir
- • • • Brake Hardware
- • • • Brake Pedal Position Sensor
- • • • Brake Pedal Shaft
- • • • Brake Pressure Metering Valve
- • • • Brake Pressure Warning Switch
- • • • Calipers
- • • • Caliper Pistons
- • • • Caliper Slide Pins
- • • • Electronic Brake Control Module
- • • • Enoder Motor
- • • • Hydraulic Control Unit
- • • • Hydraulic Lines & Fittings
- • • • Hydraulic Pump/Motor
- • • • Isolator Dump Valve
- • • • Low Fluid Switch
- • • • Master Cylinder

- • • • Parking Brake Cables
- • • • Parking Brake Control Pump
- • • • Parking Brake Lever
- • • • Pressure Modulator Valve
- • • • Proportion Valve
- • • • Rear Actuators
- • • • Traction Control Switch
- • • • Vacuum Assist Booster
- • • • Vacuum Pump
- • • • Vacuum Servo Pump
- • • • Vacuum Servo Unit
- • • • Wheel Cylinders

STEERING

- • • • All Internally Lubricated Parts (within the Rack & Pinion Assembly).
- • • • Center Link
- • • • Clock Spring
- • • • Column Shaft Couplings
- • • • Column Shaft
- • • • Drag Link
- • • • Fluid Reservoir
- • • • Fore & Aft Adjust Motor
- • • • Idler Arms
- • • • Inner Tie Rod Ends
- • • • Oil Cooler
- • • • Outer Tie Rods
- • • • Pitman Arms
- • • • Power Steering Pump
- • • • Pressure Switches
- • • • Rear Steer Driveshaft
- • • • Rear Steering Control Unit
- • • • Rear Steering Gear
- • • • Rear Tie Rod Ends
- • • • Sleeves & Adjusters
- • • • Steering Actuators
- • • • Steering Box (If damaged by an Internally Lubricated Part).
- • • • Steering Dampener
- • • • Steering Gear Encoder
- • • • Steering Knuckle
- • • • Steering Rack/Pinion
- • • • Steering Wheel
- • • • Stepper Motor

AIR CONDITIONING

- • • • Factory Authorized Only
- • • • AC Blower Motor
- • • • AC Blower Relay
- • • • AC Blower Speed Controller
- • • • AC Blower Switch
- • • • AC Heater Box
- • • • AC Hoses
- • • • AC Vacuum Hoses
- • • • Accumulator
- • • • Air Ducts & Outlets
- • • • Ambient Temperature Sensor
- • • • ATC Module
- • • • Belt Tensioner
- • • • Blend Door Actuator
- • • • Compressor
- • • • Compressor Clutch
- • • • Compressor Coil
- • • • Compressor Pulley
- • • • Condenser
- • • • Engine Cooling Fan Module
- • • • Engine Cooling Fan Relay
- • • • Evaporator
- • • • Evaporator Temperature Sensor
- • • • Expansion Valve
- • • • Heater Control Valve
- • • • High/Low Cut Off Switches
- • • • Idler Bearing
- • • • Idler Pulley
- • • • In Car Temperature Sensor
- • • • Manifold Assembly
- • • • Mode Door Actuator
- • • • Orifice Tube
- • • • POA Valve
- • • • Receiver Dryer

- • • • Schrader Valve
- • • • Sight Glass
- • • • Sun Sensor
- • • • Temperature Programmer
- • • • Vacuum Actuator

FRONT & REAR SUSPENSION

- • • • Air Ride Compressor
- • • • Ball Joints
- • • • Coil Springs
- • • • Control Arm Bushings
- • • • Control Arm Camber Strut
- • • • Kingpins
- • • • Knuckle Assembly
- • • • Lateral Control Arms
- • • • Leaf Spring Shackles
- • • • Leaf Springs
- • • • Shock Absorbers
- • • • Struts
- • • • Mode Selector Switch
- • • • Radius Arm Bushings
- • • • Spindles
- • • • Stabilizer Bar
- • • • Stabilizer Links & Bushings
- • • • Strut Mounts
- • • • Strut Bearing Plates
- • • • Strut Height Sensor
- • • • Torsion Bar
- • • • Upper & Lower Control Arms
- • • • Wheel Bearings

FUEL SYSTEM

- • • • BAP Sensor
- • • • Electronic Management Controls
- • • • Float
- • • • Fuel Distributor
- • • • Fuel Gauge
- • • • Fuel Injection Pump
- • • • Fuel Injectors
- • • • Fuel Level Sending Unit
- • • • Fuel Meter
- • • • Fuel Pump Relay
- • • • Fuel Rails
- • • • Fuel Tank
- • • • Idle Control Valve
- • • • Idle Speed Control Motor
- • • • Map Sensor
- • • • Mass Air Flow Sensor
- • • • Metal Fuel Lines
- • • • Metering Valve
- • • • O2 Sensor
- • • • Pressure Regulator
- • • • Primary Fuel Pump
- • • • Sending Unit
- • • • Throttle Body
- • • • Throttle Cable
- • • • Throttle Position Sensor
- • • • Throttle Valve Switch
- • • • Vacuum Pump

COOLING SYSTEM

- • • • Air Outlet Nozzle
- • • • Blower Motor
- • • • Blower Motor Relay
- • • • Cooling Fan Motor
- • • • Coolant Temperature Switch
- • • • Fan Blades
- • • • Fan Clutch
- • • • Heater Core
- • • • Heater Control Valve
- • • • Radiator
- • • • Rear Heater Control Unit
- • • • Recovery Unit
- • • • Water Pump

SECURITY

- • • • Anti Theft Systems
- • • • Navigation Systems
- • • • Near Object Avoidance Systems
- • • • Passive Restraint/Airbag Systems
- • • • Video Systems

* Hybrid Electric Vehicle Option ** This menu is a brief summary and does not include all coverage details. For complete details and description of coverage, including terms, conditions, limitations, and exclusions, please refer to the Vehicle Service Agreement. Programs and coverages may vary by state. PLEASE NOTE: ADMINISTRATOR MAY REPLACE COVERED PARTS WITH ORIGINAL EQUIPMENT MANUFACTURER PARTS, NON ORIGINAL EQUIPMENT MANUFACTURER PARTS, REMANUFACTURED PARTS, OR USED PARTS. This material is for marketing purposes only.